

ECM

Required ECM Inputs

- Brake Switch (ON/OFF)
- Brake Retarding (LOW/HIGH)
- Brake Cut-Off (LOW Engine Speed)
- Engine Fuel-Off Signal
- Cruise Control Options

SOLENOID VALVE

CONTROL VALVE

ADJUSTING SCREW

SLAVE PISTON

SLAVE PISTON STOP

SLAVE PISTON SPRING

SLAVE PISTON SPRING RETAINER

OIL IN

LOW OIL PRESSURE

BALL CHECK

EXHAUST ROCKER ARM

EXHAUST VALVE BRIDGE

VALVE SPRING

EXHAUST VALVES

